

OWNER'S MANUAL

Item Number: YFP-022

Product Name: 30" Wood Burning Firepit with Scroll Design

⚠️ WARNINGS:

 
- This firepit is intended for outdoor use only. **Do not** use on wooden decks.
- This firepit is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the pit.
- Not for use by children. Keep children and pets away from this firepit.
- The firepit is hot. Use with caution. Do not touch the hot firepit with bare hands.
- Never leave the burning firepit unattended, and always extinguish the fire completely before leaving the firepit.
- Do not use near flammable or combustible objects or materials.
- When the firepit is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- **DO NOT** use this firepit as a cooking appliance. This firepit is not designed for grilling food.
- Check local fire regulations and municipal by-laws for safe use.
- Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
- Some parts may contain sharp edges—especially as noted in the manual. Wear protective gloves if necessary.

PARTS LIST

No.	PARTS	Qty
A	Lift Handle	1
B	Screen	1
C	Wood grate	1
D	Fire Bowl	1
E	Frame Ring	1
F	Decorative Frame	6
G	Base	1
H	Fire Poker	1


HARDWARE LIST

No.	Hardware	Qty
I	M6*12 Bolt	18
J	M6 Nut	6

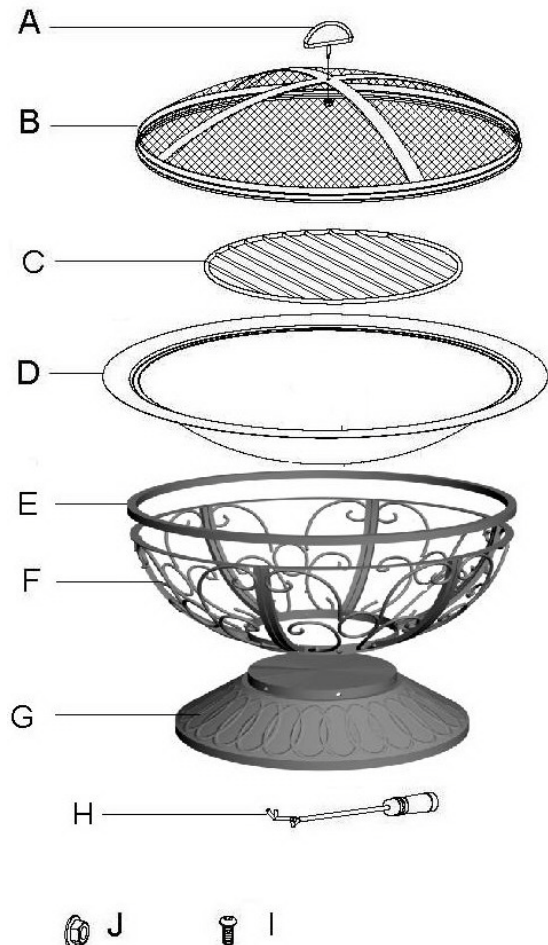


Note: You will need a screwdriver to complete the assembly.

 Step 1: Attach Lift Handle (A) to Screen (B); tighten with Nut M6 (J), as per Fig. 1

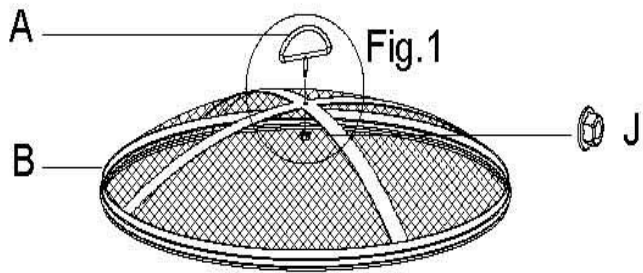

 Step 2: Attach Frame Ring (E) to Decorative Frame (F) using Bolts (I). Do not fully tighten the bolts.

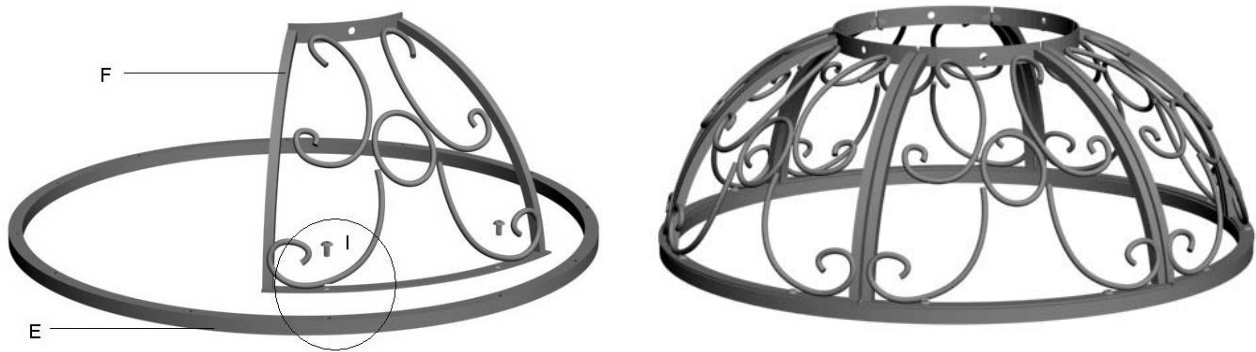

Step 3: Connect Base (G) to Decorative Frame (F) using Bolts (I) and Nut (J). Fully tighten all bolts.



Step 4: Place D, C, and B on the assembled frame. The firepit is now ready for use.

