This method works for ALL Hiland Propane Heaters, tall and tabletop.

550

٢

How to properly start a propane heater





Make sure your hose is connected and the propane tank is turned on.

For questions, please contact Tech Support at 888-775-1330



Locate the control knob on your unit

IGNITER

HIGH

OFF

e contact Tech Support at 888-775-1330



STEP

PILOT

3

CORRECT

Turn counter-clockwise until the knob stops

If your unit does not have a pilot and is direct, skip to step 5

For questions, please contact Technology

11 8 80

.

OFF

WRONG

WRONG

OFF 100

DO NOT stop at the word pilot; stop at 9 o'clock.

For questions, please contact Tech Support a



PURGE

4

1888666666 10.6 000 -----. -----..... MILLECCON -981 0 1864 50811 . 1864.4 184.5 -

Hold the knob in and allow to purge 45-60 seconds.

For questions, please contact Tech Sup

THE REPORT OF THE SUBARD

.

11

OFF

STEP 5

Piezo Ignitor: Hit ten times while holding the knob in

Electric: Hit the ignitor until the pilot light comes on

ease contact Tech Support at 888-775-4

HIGH

IGNITE BURNER

6

OFF

lilor

LOW

GNITER

STEP

Let go of the knob, and continue to turn counter-clockwise to turn the main burner on

questions, please contact Tech Support at 888-775-1330



For issues with the pilot not staying on, please click below

Tutorials and PDFs

Click below to order parts

<u>Parts</u>